
#### **ASSEMBLY INSTRUCTIONS**

# BEDSTEAD

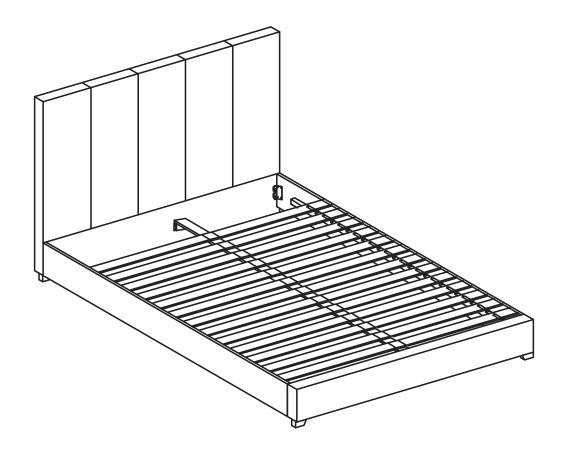

## Important before Assembly

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

It would be sensible to lay a rug or a carpet on the floor where you intend to assemble the product, to void scratches and damaging the product or the floor.

Assemble the product as close to its intended final location/ room as possible.

Do NOT use any power tools as this may damage the frame.

## **Health & Safety:**

This product or some parts of this product will be heavy. Please use an assistant when lifting.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

Please keep these instructions for future reference.

#### **Parts List**

| Parts | Description  | Qty   |
|-------|--|-------|
| 1     | Headboard *Split headboards will come in parts if requested  | 1     |
| 2     | Footend  | 1     |
| 3     | Side Rail *May arrive separately or in one package   | 2     |
| 4     | Legs  *May arrive pre-fitted on applicable models  *Some bed designs do not require legs               | 4     |
| 5     | Slat / Baseboard *subject to chosen specification  | 1 set |
| 6     | Centre Rail *(3ft, 4ft, 4ft6) Supplied with one centre rail *(5ft, 6ft) Supplied with two centre rails | 1     |

## **Tools Required**


You will need a 14mm Spanner or an Adjustable Spanner (Not provided)



## Step 1:

Attach the legs (4) to the headend (1) and footend (2).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

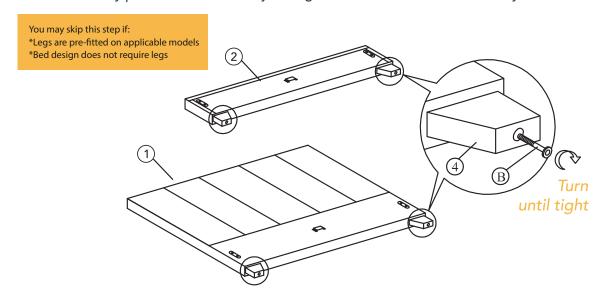

## Step 2:

Unscrew the screws on Headboard (1) and Footend (2). Attach the side rails (3) by pushing the brackets into place as shown. Ensure all 4 corners are aligned. Do NOT tighten until the slats have been placed.


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

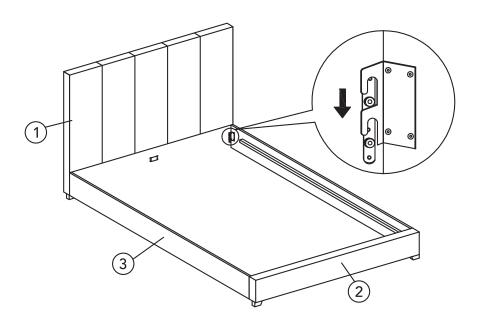

## Step 3:

Insert the centre rail (6) in the centre slots on Headboard (1) & Footend (2).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

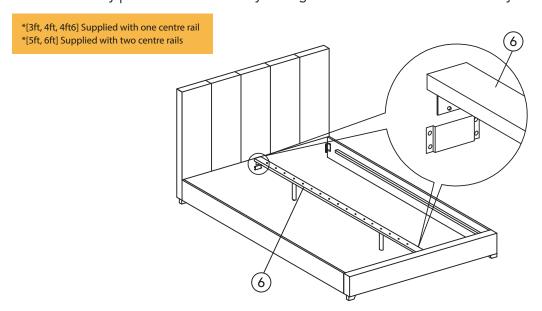

## Step 4:

Place the slats / baseboard (5) as shown and tighten all 4 corner brackets with the 14mm spanner.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

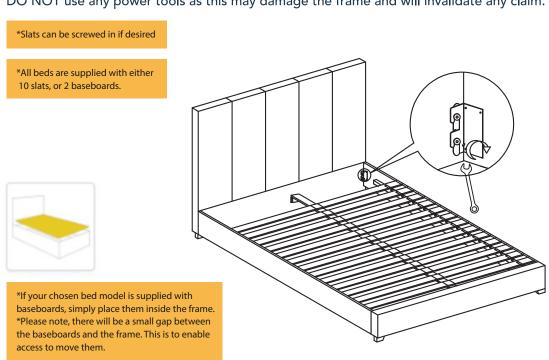

Please dispose of all packaging safely.

#### **General Care & Maintenance**

Wipe clean with a slightly damp cloth.

Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

#### **Notes**

All beds are bespoke and handmade, therefore please allow a tolerance of 1-2 inches on expected dimensions.

We have tried to make this product as easy to assemble as possible. We pre-fit some fixtures for your convenience - please note they may require slight adjustments.